


exclusive to **MGM Brakes**

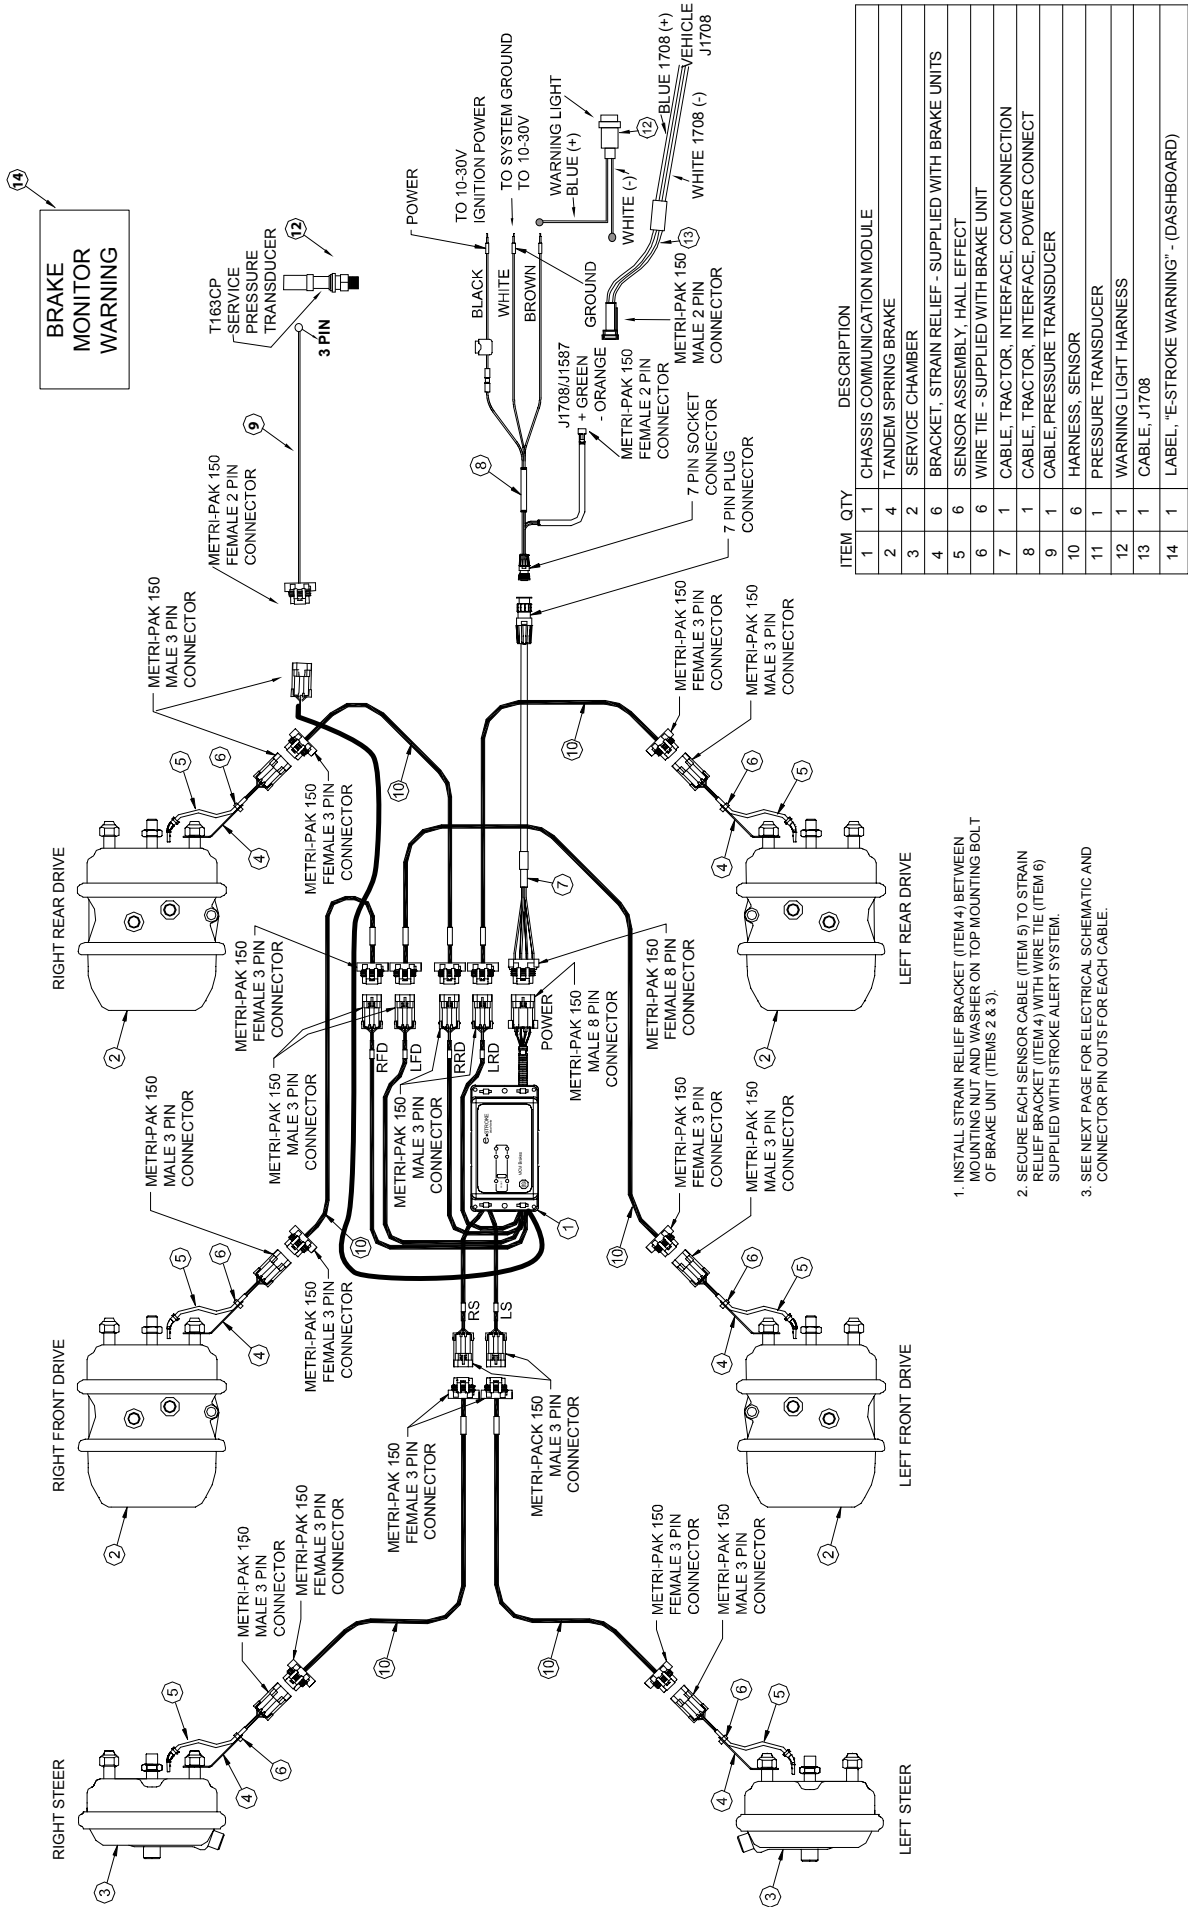

1. INSTALL STRAIN RELIEF BRACKET (ITEM 4) BETWEEN MOUNTING NUT AND WASHER ON TOP MOUNTING BOLT OF BRAKE UNIT (ITEMS 2 & 5).
2. SECURE EACH SENSOR CABLE (ITEM 5) TO STRAIN RELIEF BRACKET (ITEM 4) WITH WIRE TIE (ITEM 6) SUPPLIED WITH STROKE ALERT SYSTEM.
3. SEE NEXT PAGE FOR ELECTRICAL SCHEMATIC AND CONNECTOR PIN OUTS FOR EACH CABLE.



### 3 Axle Wiring Schematic

(e-STROKE<sup>®</sup> system covered by U.S. Patent Nos. 5,450,930, 5,825,287 and 6,255,941 and other U.S. and Foreign Patents Pending)

